



# HFTW SERIES MANUAL TORQUE WRENCHES

HexForce manual torque wrenches are specialized tools featuring a calibrated mechanism that allows you to apply controlled and measurable torque to a fastener. They typically consist of a handle, a body with a scale displaying torque values, and an attachment for sockets or other drives.



RATCHET TYPE	MODEL	TORQUE (Nm)		SQ. DRIVE (inch)	WEIGHT (kg)	OAL (mm)
		MIN.	MAX.			
	HFTW-8R	2.5	11	3/8	1.10	334
	HFTW-24R	5	33	3/8	1.60	443
	HFTW-50R	12	68	1/2	1.50	499
	HFTW-100R	25	135	1/2	1.80	555
	HFTW-160R	50	225	1/2	3.20	626
	HFTW-250R	70	330	1/2	3.80	840
	HFTW-410R	140	560	3/4	6.80	1210
	HFTW-500R	200	800	3/4	7.50	1261
	HFTW-700R	480	940	3/4	14.50	1471
	HFTW-1000R	540	1375	1	17.80	1505
	HFTW-1400R	1000	1900	1	20.50	1356
	HFTW-2000R	1350	2700	1	29.00	1498

NON RATCHET TYPE	MODEL	TORQUE (Nm)		SQ. DRIVE (inch)	WEIGHT (kg)	OAL (mm)
		MIN.	MAX.			
	HFTW-8	2.5	11	3/8	0.55	318
	HFTW-24	5	33	3/8	0.65	422
	HFTW-50	12	68	1/2	1.00	476
	HFTW-100	25	135	1/2	1.70	546
	HFTW-160	50	225	1/2	2.60	597
	HFTW-250	70	330	1/2	3.00	825
	HFTW-410	140	560	3/4	5.80	1130
	HFTW-500	200	810	3/4	6.50	1181
	HFTW-700	480	940	3/4	13.00	1397
	HFTW-1000	540	1375	1	16.00	1505
	HFTW-1400	1000	1900	1	20.20	1356
	HFTW-2000	1350	2700	1	28.00	1498

OPEN JAW SERIES	MODEL	TORQUE (Nm)		WEIGHT (kg)	OAL (mm)
		MIN.	MAX.		
	HFTW-80J	2.5	11	1.10	334
	HFTW-240J	5	33	1.60	443
	HFTW-500J	12	68	1.50	499
	HFTW-1000J	25	135	1.80	555
	HFTW-1600J	50	225	3.20	626
	HFTW-2500J	70	330	3.80	840
	HFTW-4100J	140	560	6.80	1210
	HFTW-5000J	200	810	7.50	1261
	HFTW-7000J	480	940	14.50	1471
	HFTW-10000J	540	1375	17.80	1505
	HFTW-14000J	1000	1900	20.50	1356
	HFTW-20000J	1350	2700	29.00	1498

\*Ring Jaw is also available